

RIA-81-U973  
Supplement

# TECHNICAL LIBRARY

## CONTRACTOR REPORT ARLCD-CR-81017

### Supplement

#### HIGH FRAGMENTATION STEEL PRODUCTION PROCESS

Colin C. MacCrindle  
Metallurgical Engineer  
Chamberlain Manufacturing Corporation  
Scranton Army Ammunition Plant  
Scranton, PA 18505

William Sharpe  
Project Engineer  
ARRADCOM, Dover, NJ 07801

September 1982

19970908 132

Approved for public release; distribution unlimited.



## Table of Contents

	<u>Page</u>
Introduction . . . . .	1
Conclusion . . . . .	26
Appendix A: . . . . .	27
Appendix B: Hardness Pattern . . . . .	30
Appendix C: ASTM Grain Size . . . . .	33
Distribution List . . . . .	36




## List of Tables

<u>Table</u>	<u>Page</u>
1. Ladle Analysis Crucible Steel . . . . .	2
2. Chemistry - Mid Radius vs Edge . . . . .	4
3. Segregation . . . . .	5
4. Hardness Pattern . . . . .	5
5. Inclusion Rating . . . . .	6
6. Mechanical Properties . . . . .	25
7. ASTM Grain Size . . . . .	26



## List of Figures

<u>Figure</u>	<u>Page</u>
1. SEM Photomicrograph of Typical Inclusion (Crucible Steel) . . . . .	7
2. EDAX-SEM Evaluation of Inclusion (Crucible Steel) . . . . .	8
3. SEM Photomicrograph of Inclusion (Bethlehem Steel) . . . . .	9
4. EDAX-SEM Evaluation of Inclusion (Bethlehem Steel) . . . . .	10
5. EDAX-SEM Evaluation of Inclusion (Bethlehem Steel) . . . . .	11
6. EDAX Evaluation of Complex Inclusion (Bethlehem Steel) . . . . .	12
7. EDAX-SEM Evaluation of Matrix of Steel Common to Both Crucible and Bethlehem Steel . . . . .	13
8. Photomicrograph of Flame Cut Surface . . . .	14
9. Photomicrograph of Longitudinal Section of Flame Cut Area . . . . .	15
10. Photomicrograph of Untempered Platelets with Microcracks . . . . .	18
11. Photomicrograph of Untempered Platelets with Microcracks . . . . .	19
12. Mechanical Properties vs Tempering Temperatures - Crucible Steel - Longitudinal Coupons . . . . .	20
13. Mechanical Properties vs Tempering Temperatures - Crucible Steel - Traverse Coupons . . . . .	21
14. Mechanical Properties vs Tempering Temperatures - Bethlehem Steel - Longitudinal Coupon . . . . .	22
15. Mechanical Properties vs Tempering Temperatures - Bethlehem Steel - Traverse Coupon . . . . .	23

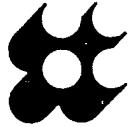

## List of Figures

<u>Figure</u>	<u>Page</u>
16. Composite Curves of Mechanical Properties vs Tempering Temperatures - Longitudinal Coupon . . . . .	24
17. Macro Etched Section - Crucible Steel . . .	28
18. Macro Etched Section - Bethlehem Steel . . .	29
19. Hardness Pattern - Bethlehem Steel . . . .	31
20. Hardness Pattern - Crucible Steel . . . .	32
21. ASTM Grain Size - Bethlehem Steel . . . .	34
22. ASTM Grain Size - Crucible Steel . . . .	35

## INTRODUCTION

In order to gain more data on HF-1 steel, two (2) samples were studied at the request of ARRADCOM. One (1) sample was produced by Bethlehem Steel Corporation at their California mill and the other was produced by Crucible Steel.

Both samples were evaluated according to the format in the contractor report ARLCD-CR-81017, MM&T Project 5794189 dated August, 1981.

## ACQUISITION OF STEEL

### Crucible Steel:

Crucible Steel billets were remnants of steel that was forged at Scranton Army Ammunition Plant for XM795 project and ordered as 5-1/4 inch RCS.

### Bethlehem Steel:

Bethlehem Steel samples were pieces shipped to the contractor by Norris Industries, California. The size received was 4 inch RCS.

## CHARACTERIZATION

### Surface Quality:

Both samples had good surface quality with neither having excessive conditioning (grinding) by their respective mills.

## METALLURGICAL EVALUATION

### Heat Chemistry:

Samples of both materials were submitted to U. S. Testing for chemical analysis. The ladle chemistry from Bethlehem Steel was not available. The ladle chemistry of Crucible Steel is shown in Table 1.

TABLE 1  
LADLE ANALYSIS FROM CRUCIBLE STEEL

	<u>C</u>	<u>Mn</u>	<u>P</u>	<u>S</u>	<u>Si</u>	<u>Ni</u>	<u>Cr</u>	<u>Mo</u>	<u>Cu</u>	<u>A1</u>
1.08	1.82	0.023	0.022	0.86	0.13	0.09	0.004	0.004	0.03	0.009

U. S. Testing Company was sent samples from both suppliers so that the edge chemistry 0.25 inch beneath the surface could be compared with the chemistry at Mid Radius.

The results of the analysis are shown in Table 2.

TABLE 2 - CHEMISTRY OF MID RADIUS VS EDGE

	<u>% Carbon</u>	<u>% Manganese</u>	<u>% Silicon</u>
Crucible - Mid Radius	1.20	1.60	0.42
Crucible - Surface	1.04	1.70	0.44
Bethlehem XX2L30D Mid Radius	1.10	1.40	0.39
Bethlehem XX2L30D Surface	1.01	1.45	0.42

	<u>% Nickel</u>	<u>% Copper</u>	<u>% Molybdenum</u>
Crucible - Mid Radius	0.12	0.11	0.10
Crucible - Surface	0.13	0.10	0.10
Bethlehem XX2L30D Mid Radius	0.13	0.11	0.10
Bethlehem XX2L30D Surface	0.13	0.11	0.11

	<u>% Aluminum</u>	<u>% Sulfur</u>	<u>% Phosphorus</u>
Crucible Mid Radius	0.01	0.030	0.012
Crucible Surface	0.01	0.013	0.014
Bethlehem XX2L30D Mid Radius	0.01	0.037	0.010
Bethlehem XX2L30D Surface	0.01	0.018	0.012

Both samples meet the chemical specification of HF-1 steel.  
Both steel samples show slight carbon and sulfur segregation.

Segregation:

In order to determine the segregation of both samples, billet sections from both heats were compared to macrographs in MIL-STD-1459A. Both samples were classified as acceptably sound steel. The macrographs are contained in Appendix A for comparison.

The segregation ratings for the subject steel are shown in Table 3. The ratings system consists of an alpha character and a numeral. A - designates center defects; B - subsurface; C - Ring; D - miscellaneous defects. The number designates the severity of the defect, progressing from one to seven, seven being the most severe. Any defect in the D series, except D-2, can be cause for rejection of the steel.

Both samples were etched in a solution of 50% hydrochloric acid and 50% water at 170°F after both samples were ground. Upon comparison with the MIL standard, both were rated as clean and sound.

TABLE 3 - SEGREGATION EVALUATION

Bethlehem Steel	B2	C1	A2
Crucible Steel	B2	C2	A3

Hardenability:

No hardenability data was available for either sample.

BILLET CROSS SECTION HARDNESS PATTERN

A 10 x 10 grid of 1/2 inch squares was inscribed on the Crucible Steel section and a 9 x 9 grid was inscribed on the Bethlehem Steel section. Hardness readings were taken in the Rockwell C range and are reported in Table 4. Actual hardness patterns are included in Appendix B.

TABLE 4 - HARDNESS PATTERN

	<u>RC Mean</u>	<u>BHN</u>
Bethlehem Steel	29.4	280
Crucible Steel	30.2	287

## INCLUSIONS (Microcleanliness)

Both samples were evaluated with a Scanning Electron Microscope and EDAX analysis.

TABLE 5 - INCLUSION RATING

	<u>Manganese Sulfide</u>	<u>Calcium Silicate</u>
Bethlehem Steel	2 - Heavy	2 - Heavy
Crucible Steel	1/2 - Thin	1 - Thin

### Crucible:

Figure 1 is an SEM photomicrograph of the inclusion from Crucible Steel and Figure 2 in its EDAX evaluation.

CRUCIBLE STEEL

SEM

Inclusion Analysis

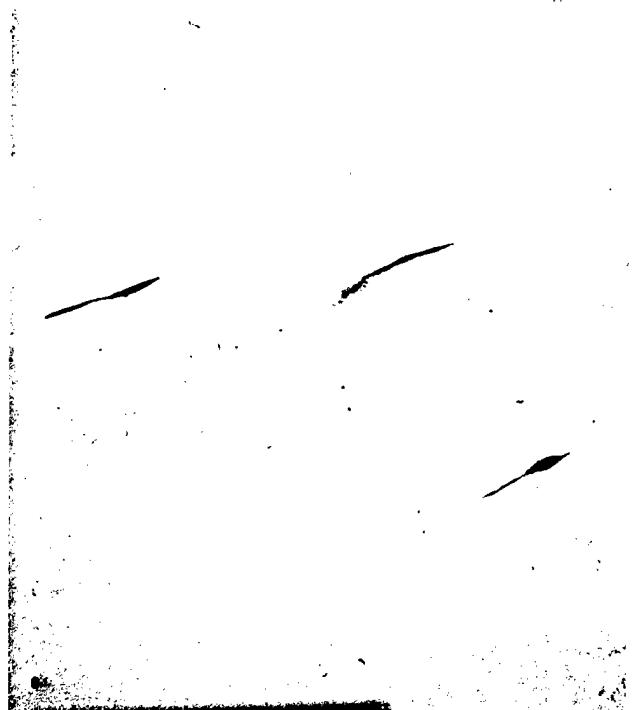


Figure 1 - SEM photomicrograph of typical inclusion.  
300X

CRUCIBLE STEEL  
SEM  
EDAX Evaluation of Inclusions

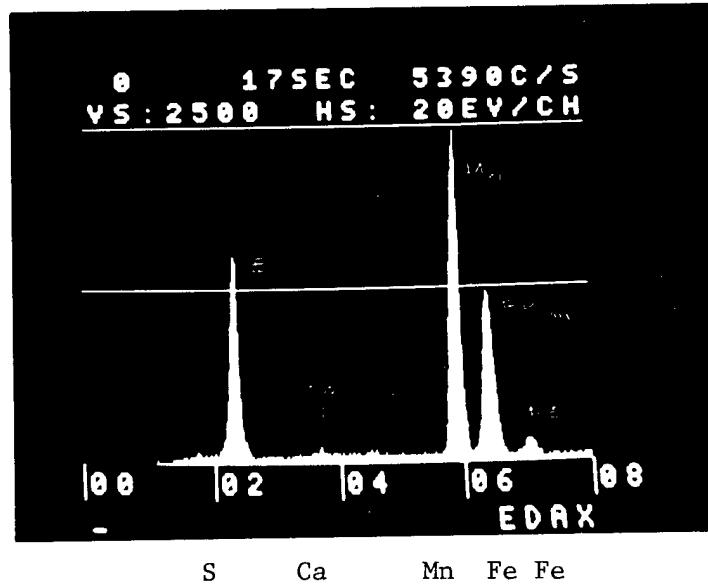


Figure 2 - EDAX Evaluation

## Bethlehem Steel:

Figure 3 is an SEM photomicrograph of one type of inclusion found in the sample. It is typical Manganese Sulfide and its EDAX evaluation is depicted in Figure 4.

Figure 5 is an SEM photomicrograph of a round type inclusion. Its EDAX evaluation is illustrated in Figure 6. Its complexity is interesting. It is significantly higher in calcium. This information may be of value when evaluating cause of defects found in the processing stages.

It is thought that the heavier inclusion rating of Bethlehem Steel is due to the difference in melting practice of Bethlehem Steel (BOF) versus Crucible Steel (electric). The difference is not detrimental to obtaining the desired mechanical properties.

## MATRIX OF BOTH SAMPLES

Figure 7 is the EDAX evaluation common to both vendors.

## FLAME CUT ENDS

Bethlehem Steel flame cut several billets in order to provide sample bars for the contractor to evaluate. One of these flame cut ends was metallographically evaluated and revealed some interesting phenomena. Figure 8 shows the end surface of the billet on the flame cut surface. Figure 9 is the longitudinal section of the cut out in Figure 8. The top area is a layer of white (dendritic) cast iron formed by the absorption of carbon from the torch. The next layer is a section of untempered martensite. In this layer are white areas of retained austenite which are mainly perpendicular to the surface. Special attention should be given to the retained austenite streak in the center of the photomicrograph as it has intergranular cracking propagating from the surface along the austenitic grain boundaries. This crack will never self-weld on forging but will decarburize along its surface and subsequently produce a crack in a forging. Evidence of this was published by the author in a report dated 11 February 1981, entitled "M106, Evaluation of Base Defect".

Figure 10 and 11 are magnified centerline views of the untempered martensite platelets showing unique micro cracking in the platelets.

## HEAT TREATMENT

Coupons of both vendors austenitized at 1500°F quenched in oil and tempered at various temperatures. Figures 12 through 15 illustrate the mechanical properties attainable at various tempering temperatures.

BETHLEHEM STEEL

SEM

Inclusion Analysis

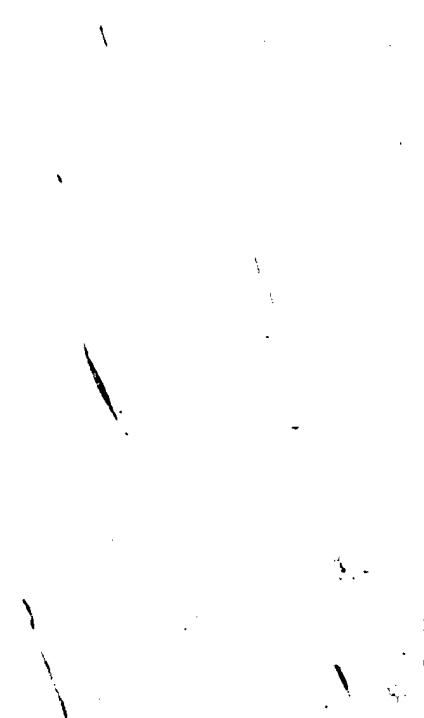


Figure 3 - SEM photomicrograph of one type of inclusion.  
300X

BETHLEHEM STEEL

SEM

Inclusion Evaluation

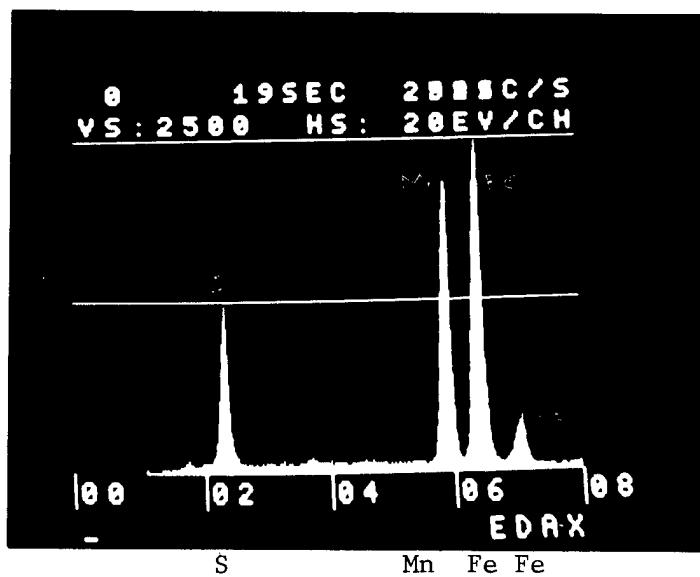


Figure 4 - EDAX Evaluation of inclusion.

BETHLEHEM STEEL

SEM



Figure 5 - SEM photomicrograph of a round type of inclusion.  
3000X

BETHLEHEM STEEL

SEM

EDAX Analysis of Inclusion

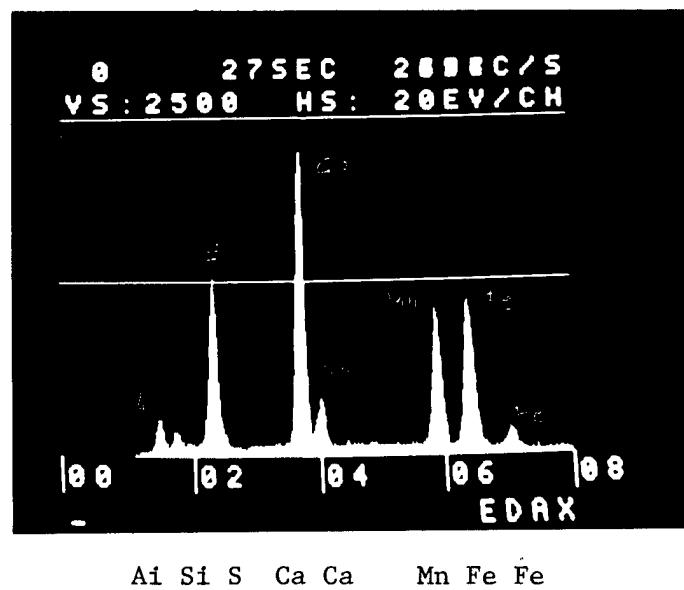


Figure 6 - EDAX Evaluation of complex round inclusion.

BETHLEHEM STEEL  
CRUCIBLE STEEL

EDAX Evaluation of Steel Matrix

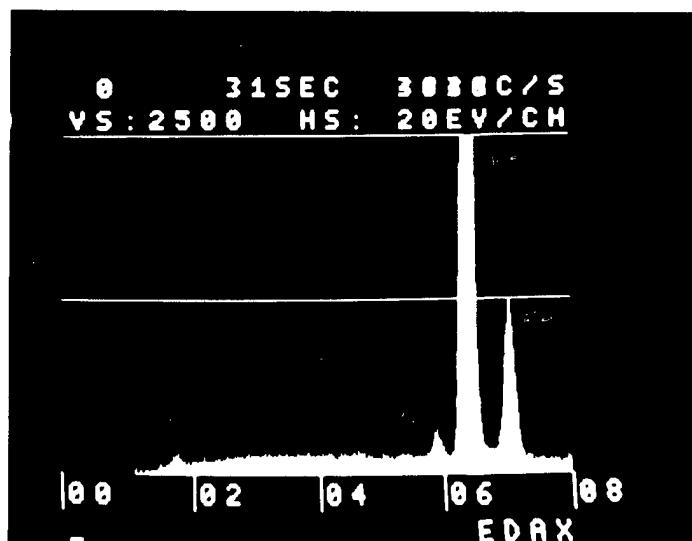


Figure 7 - EDAX Evaluation of Matrix common to both vendor material.

BETHLEHEM STEEL

Flame Cut End Evaluation

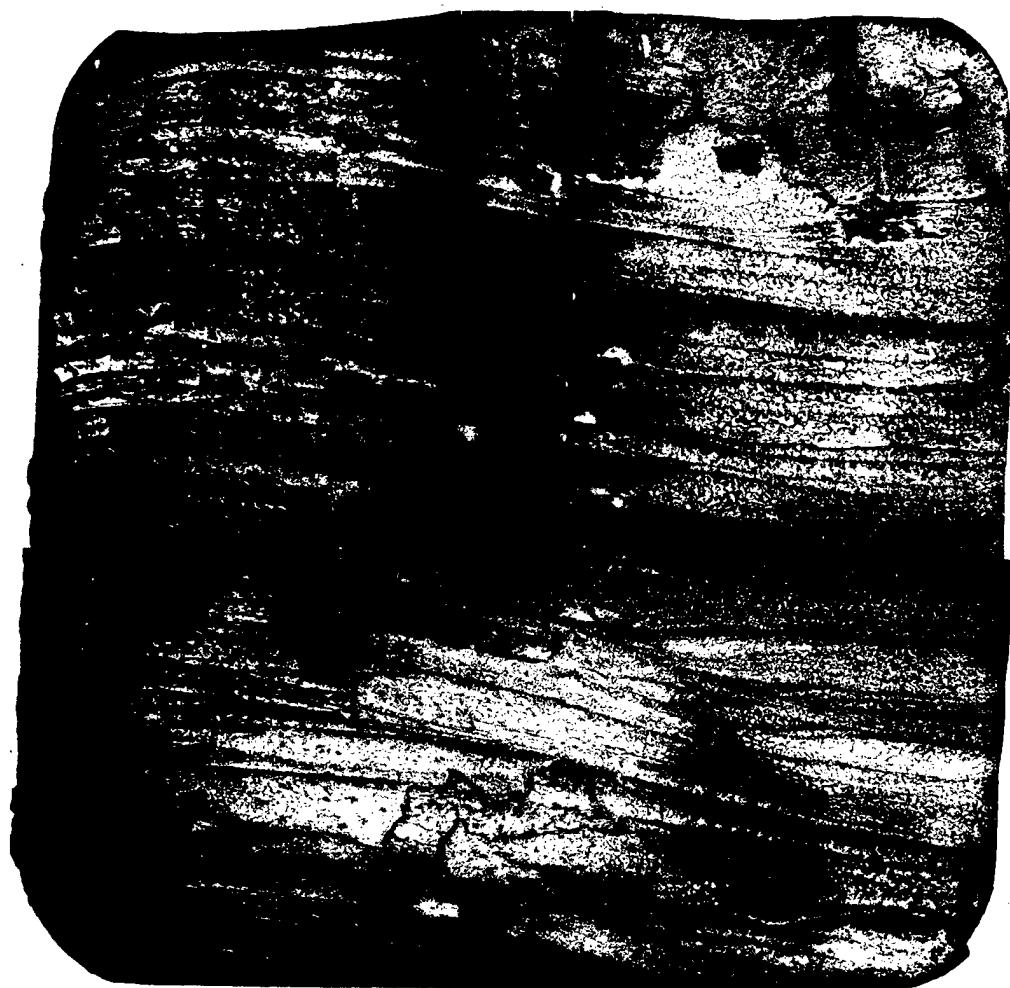


Figure 8 - Photomacrograph of flame cut surface. 1X

BETHLEHEM STEEL

Flame Cut Evaluation



Figure 9 - Photomicrograph of longitudinal section of flame cut area.  
63X

BETHLEHEM STEEL

Flame Cut Evaluation

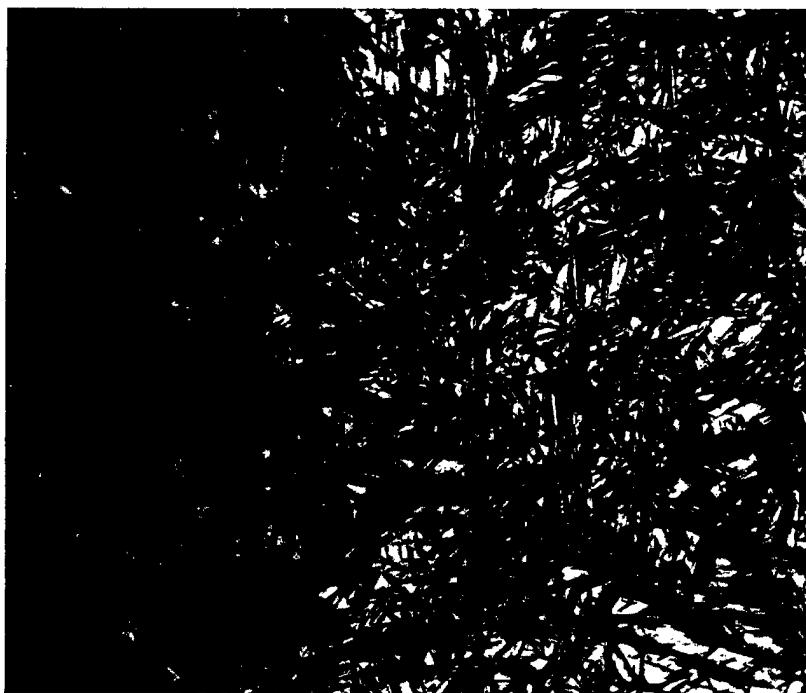


Figure 10 - Photomicrograph of untempered martensite platelet with micro-cracks. 500X



BETHLEHEM STEEL

Flame Cut Evaluation

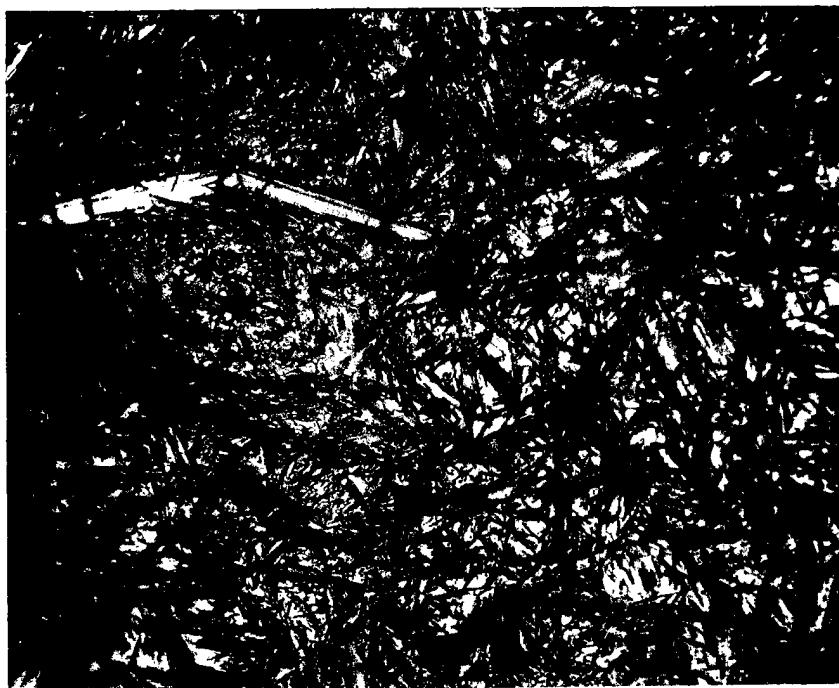
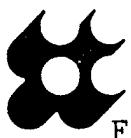


Figure 11 - Photomicrograph of untempered martensite platelets with micro-cracks. 500X

  
Figure 16 illustrates the composite of the mechanical properties of the material from the four vendors.

This figure shows that the steel from all four vendors will meet the minimum properties required for his scope of work.

Table 6 is in the mechanical data for both Crucible Steel and Bethlehem Steel (California).

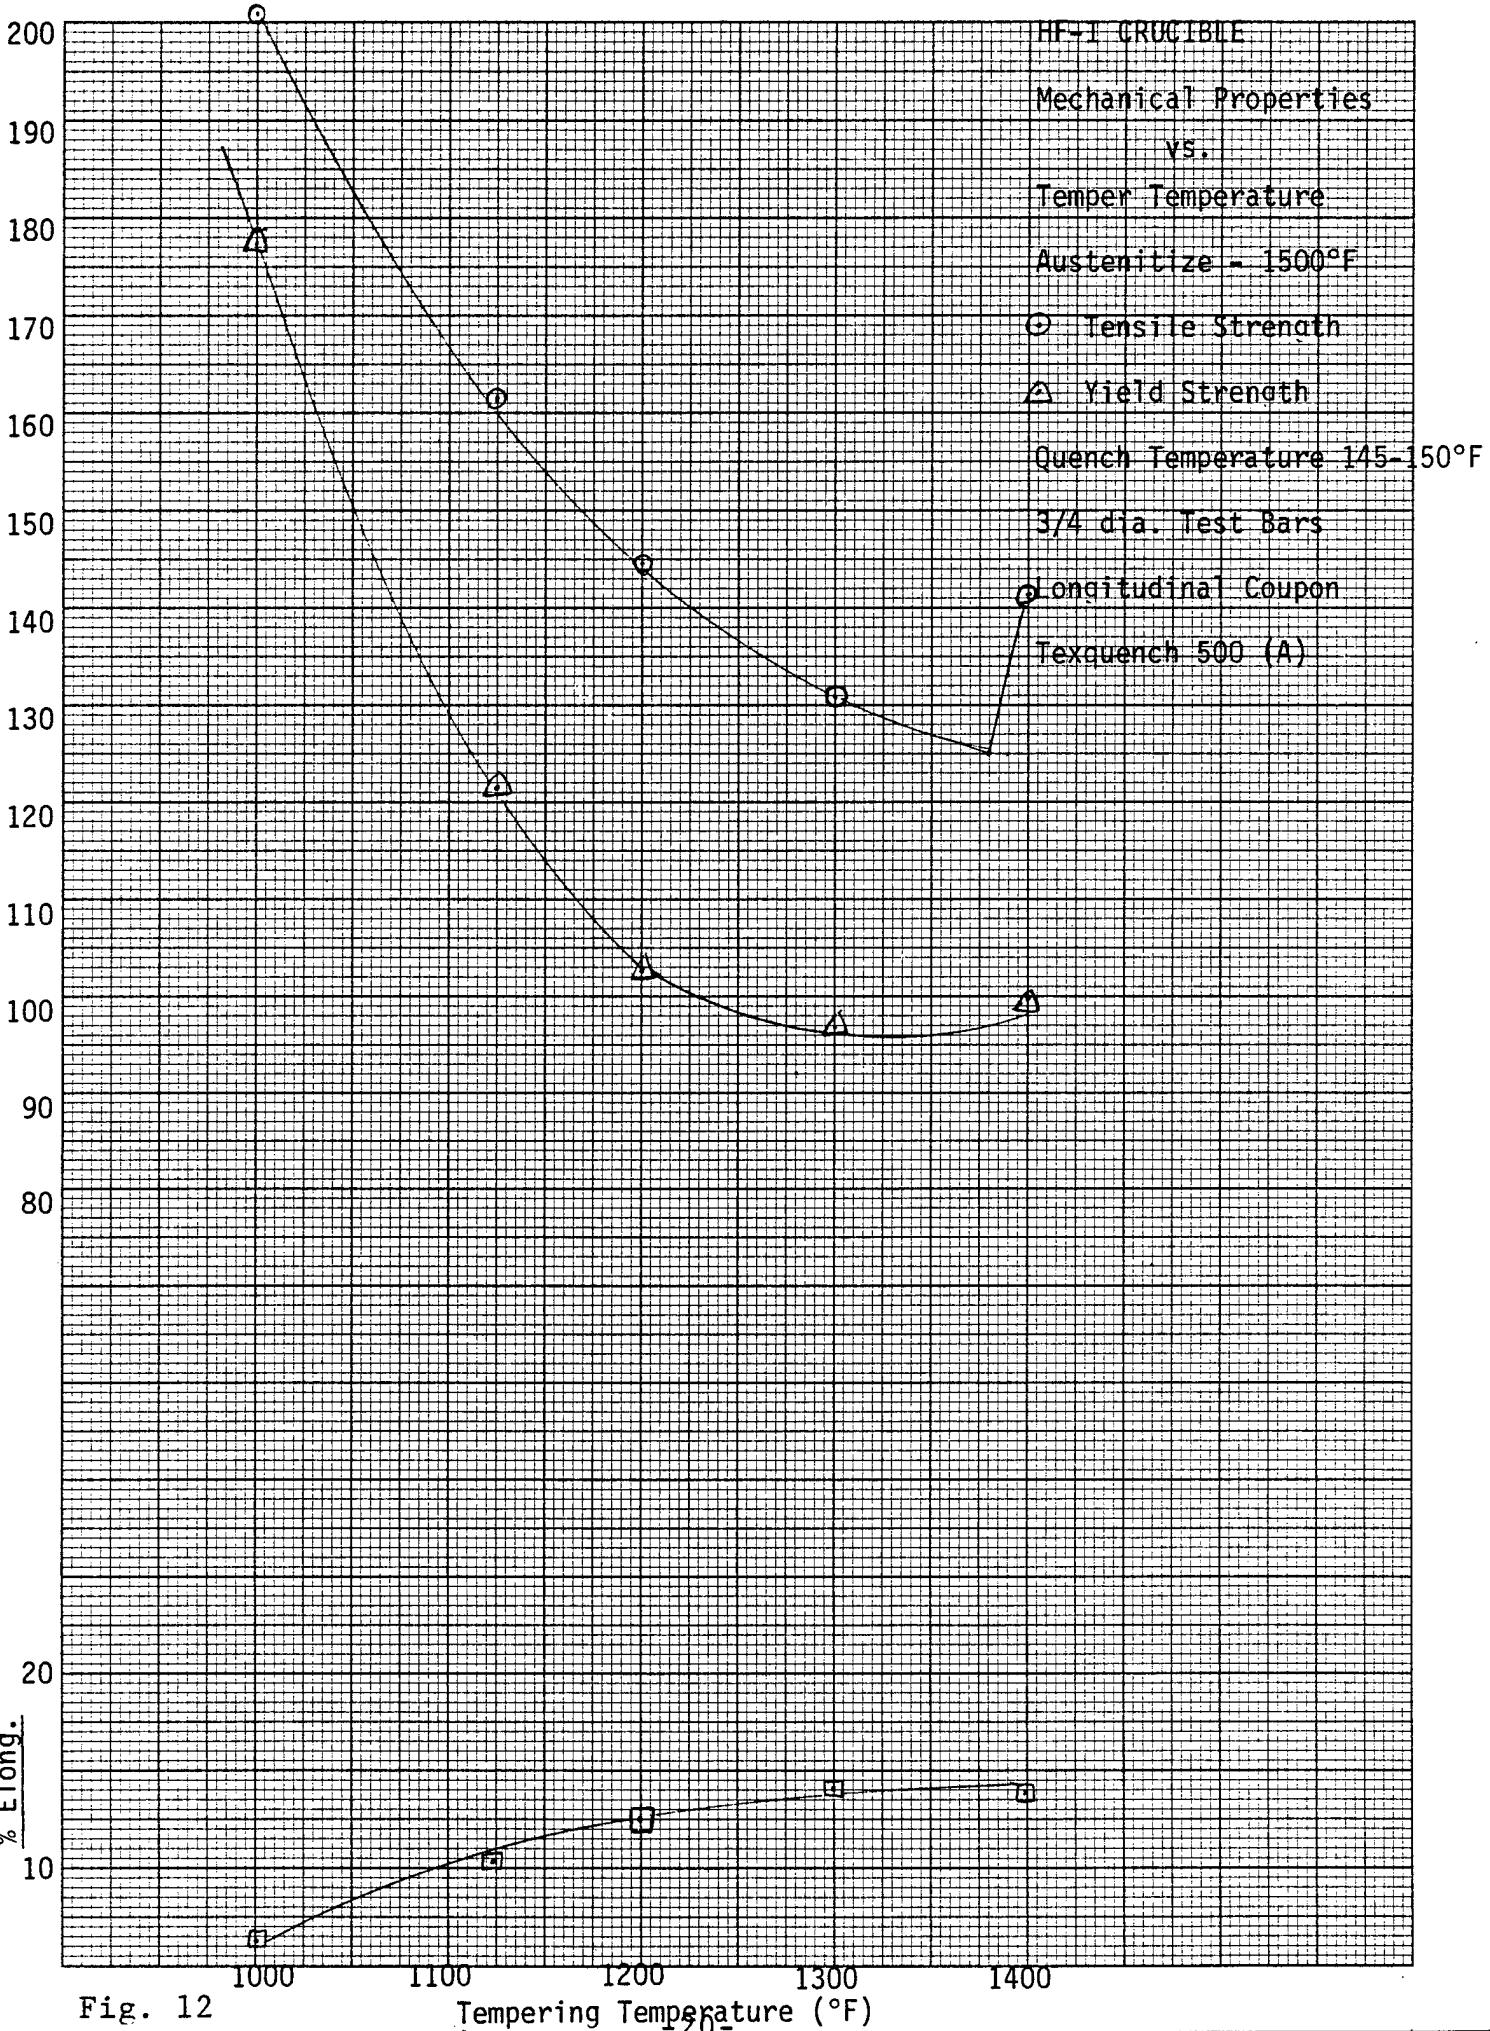
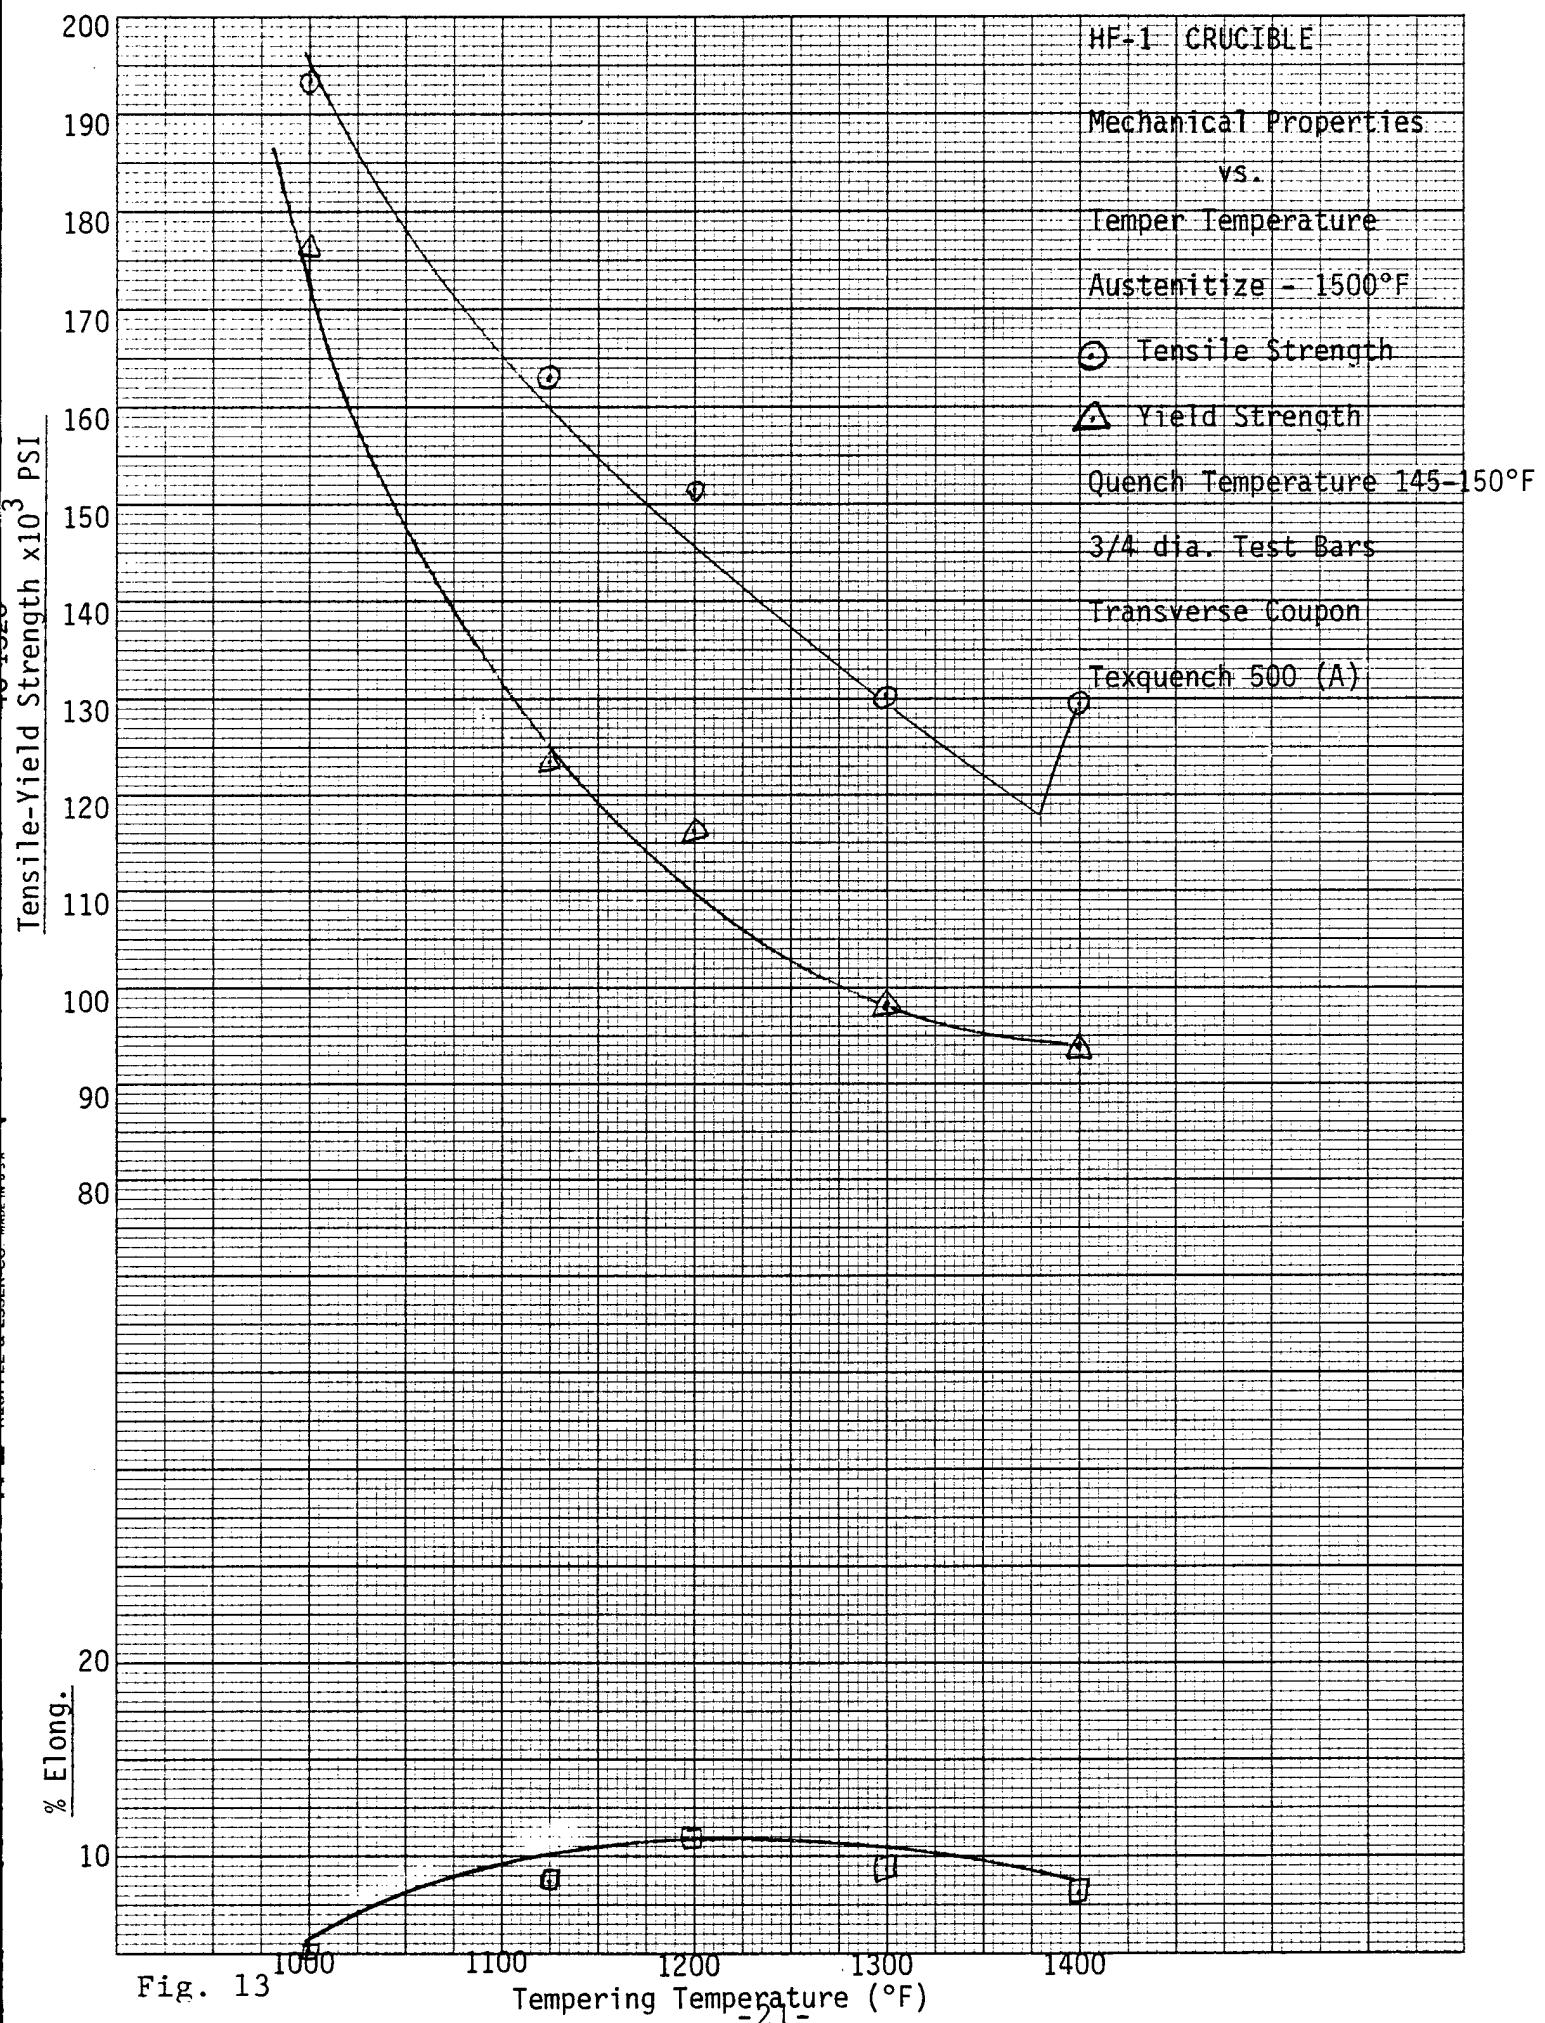
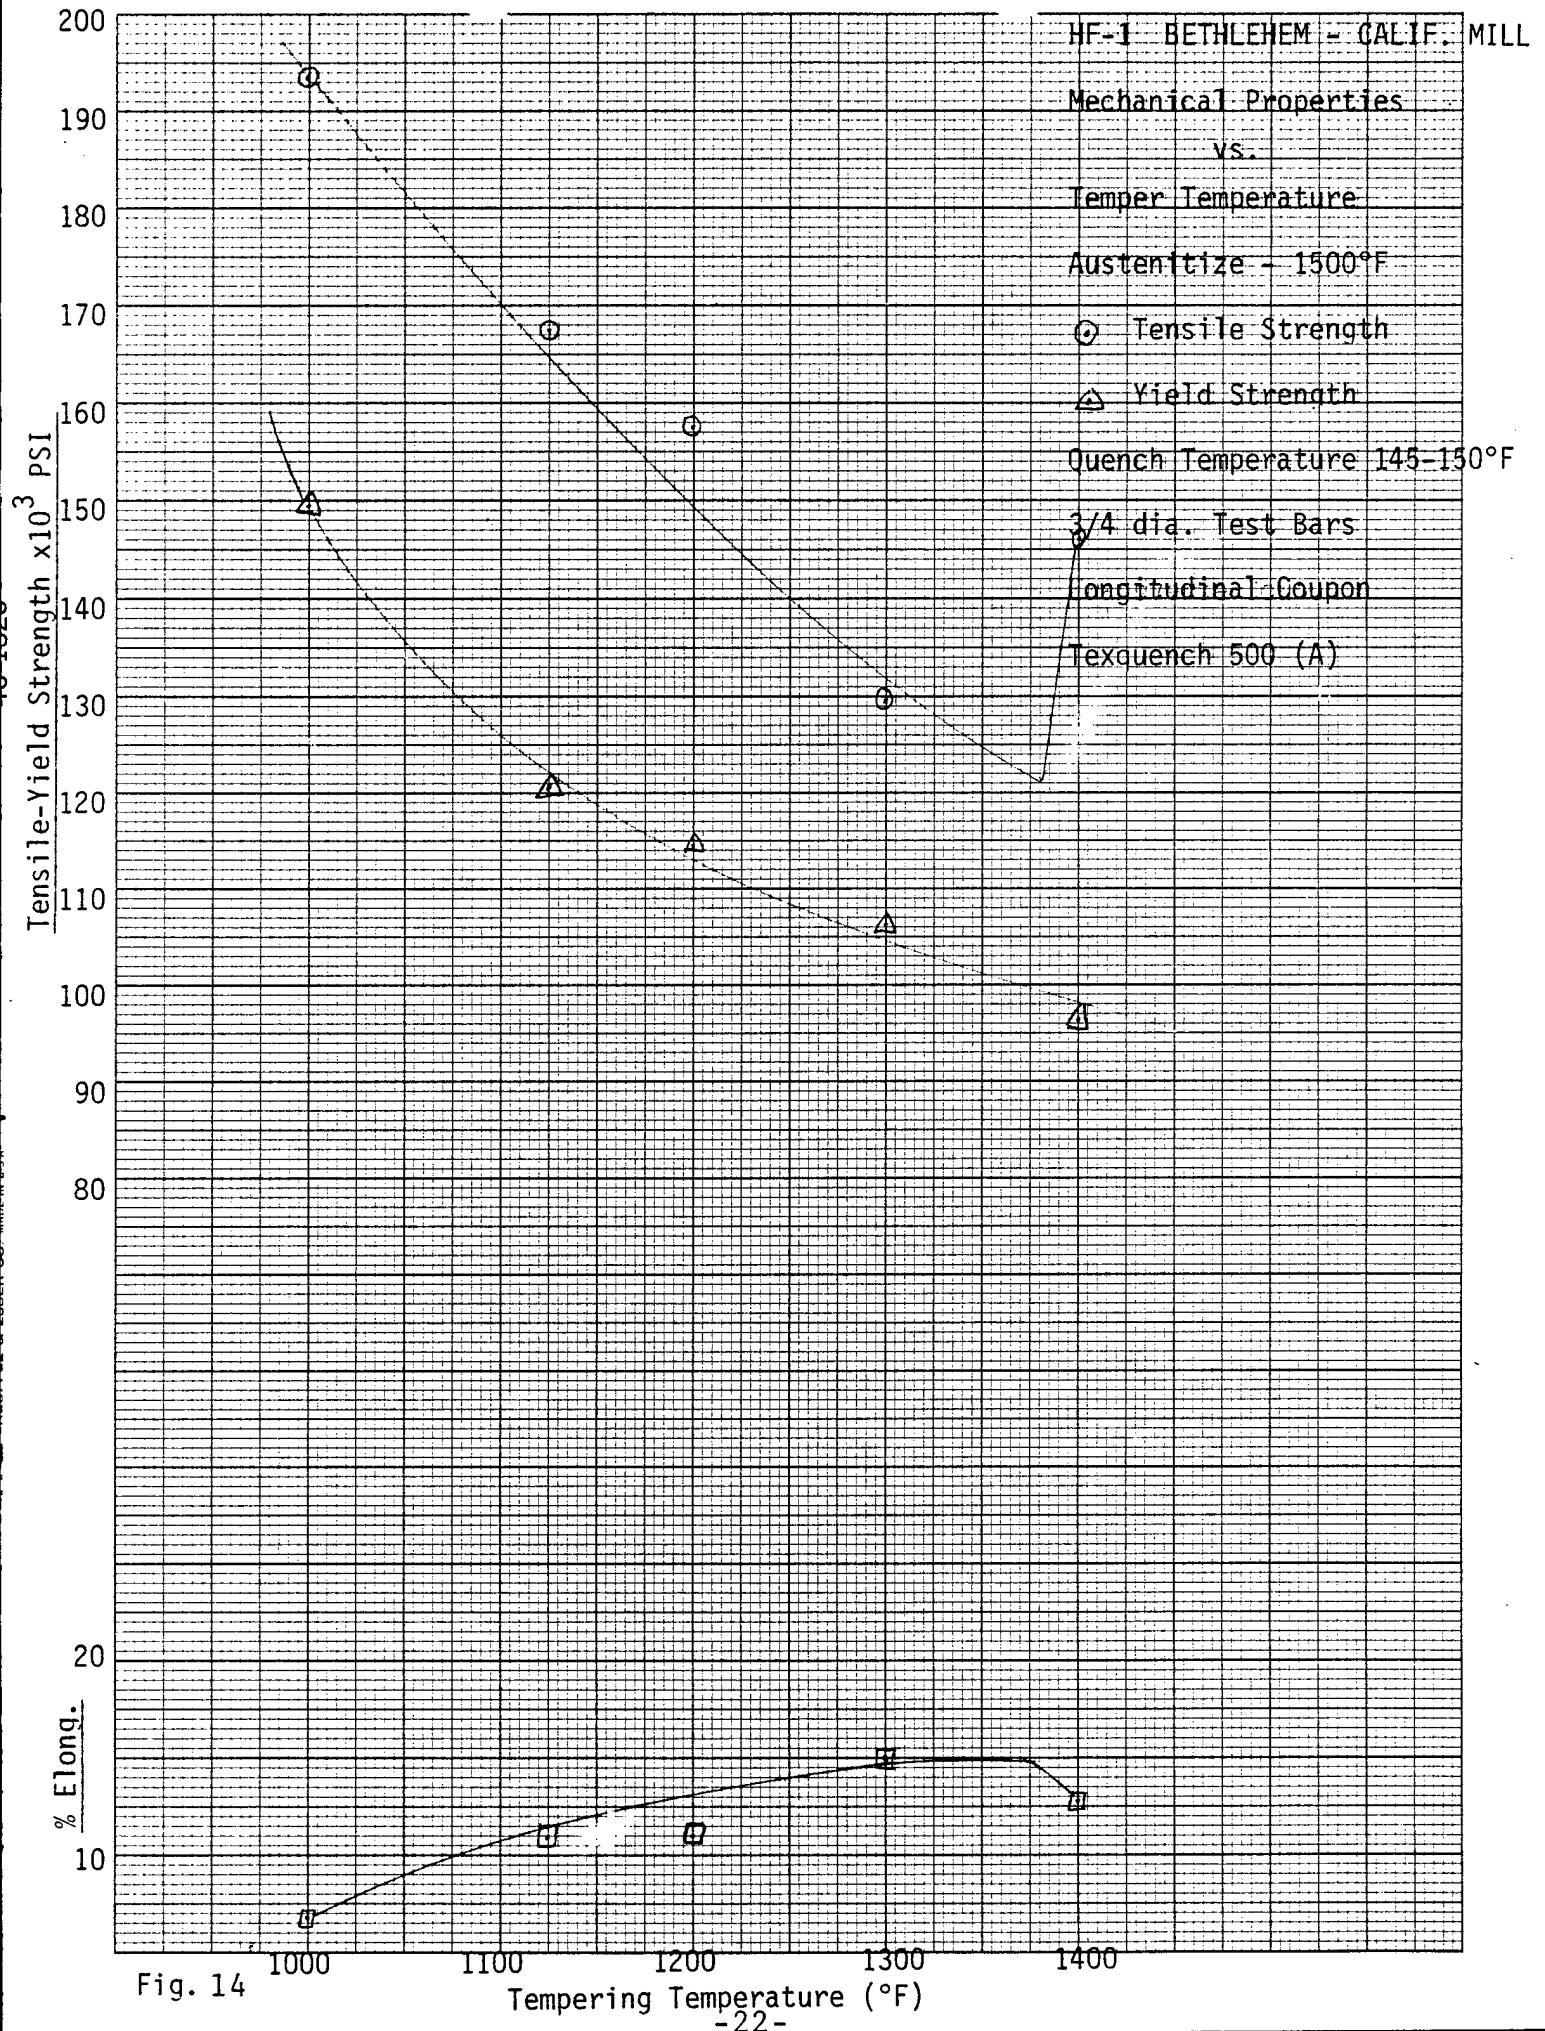


Fig. 12





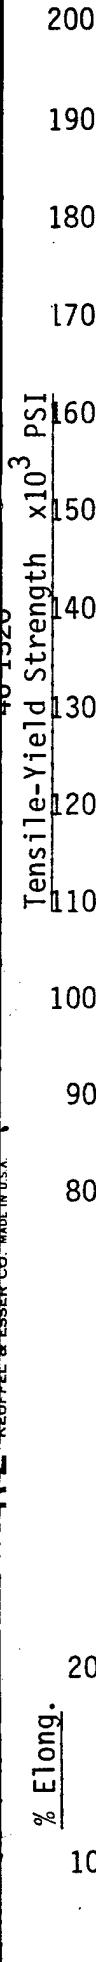


Fig. 15

Tempering Temperature (°F)

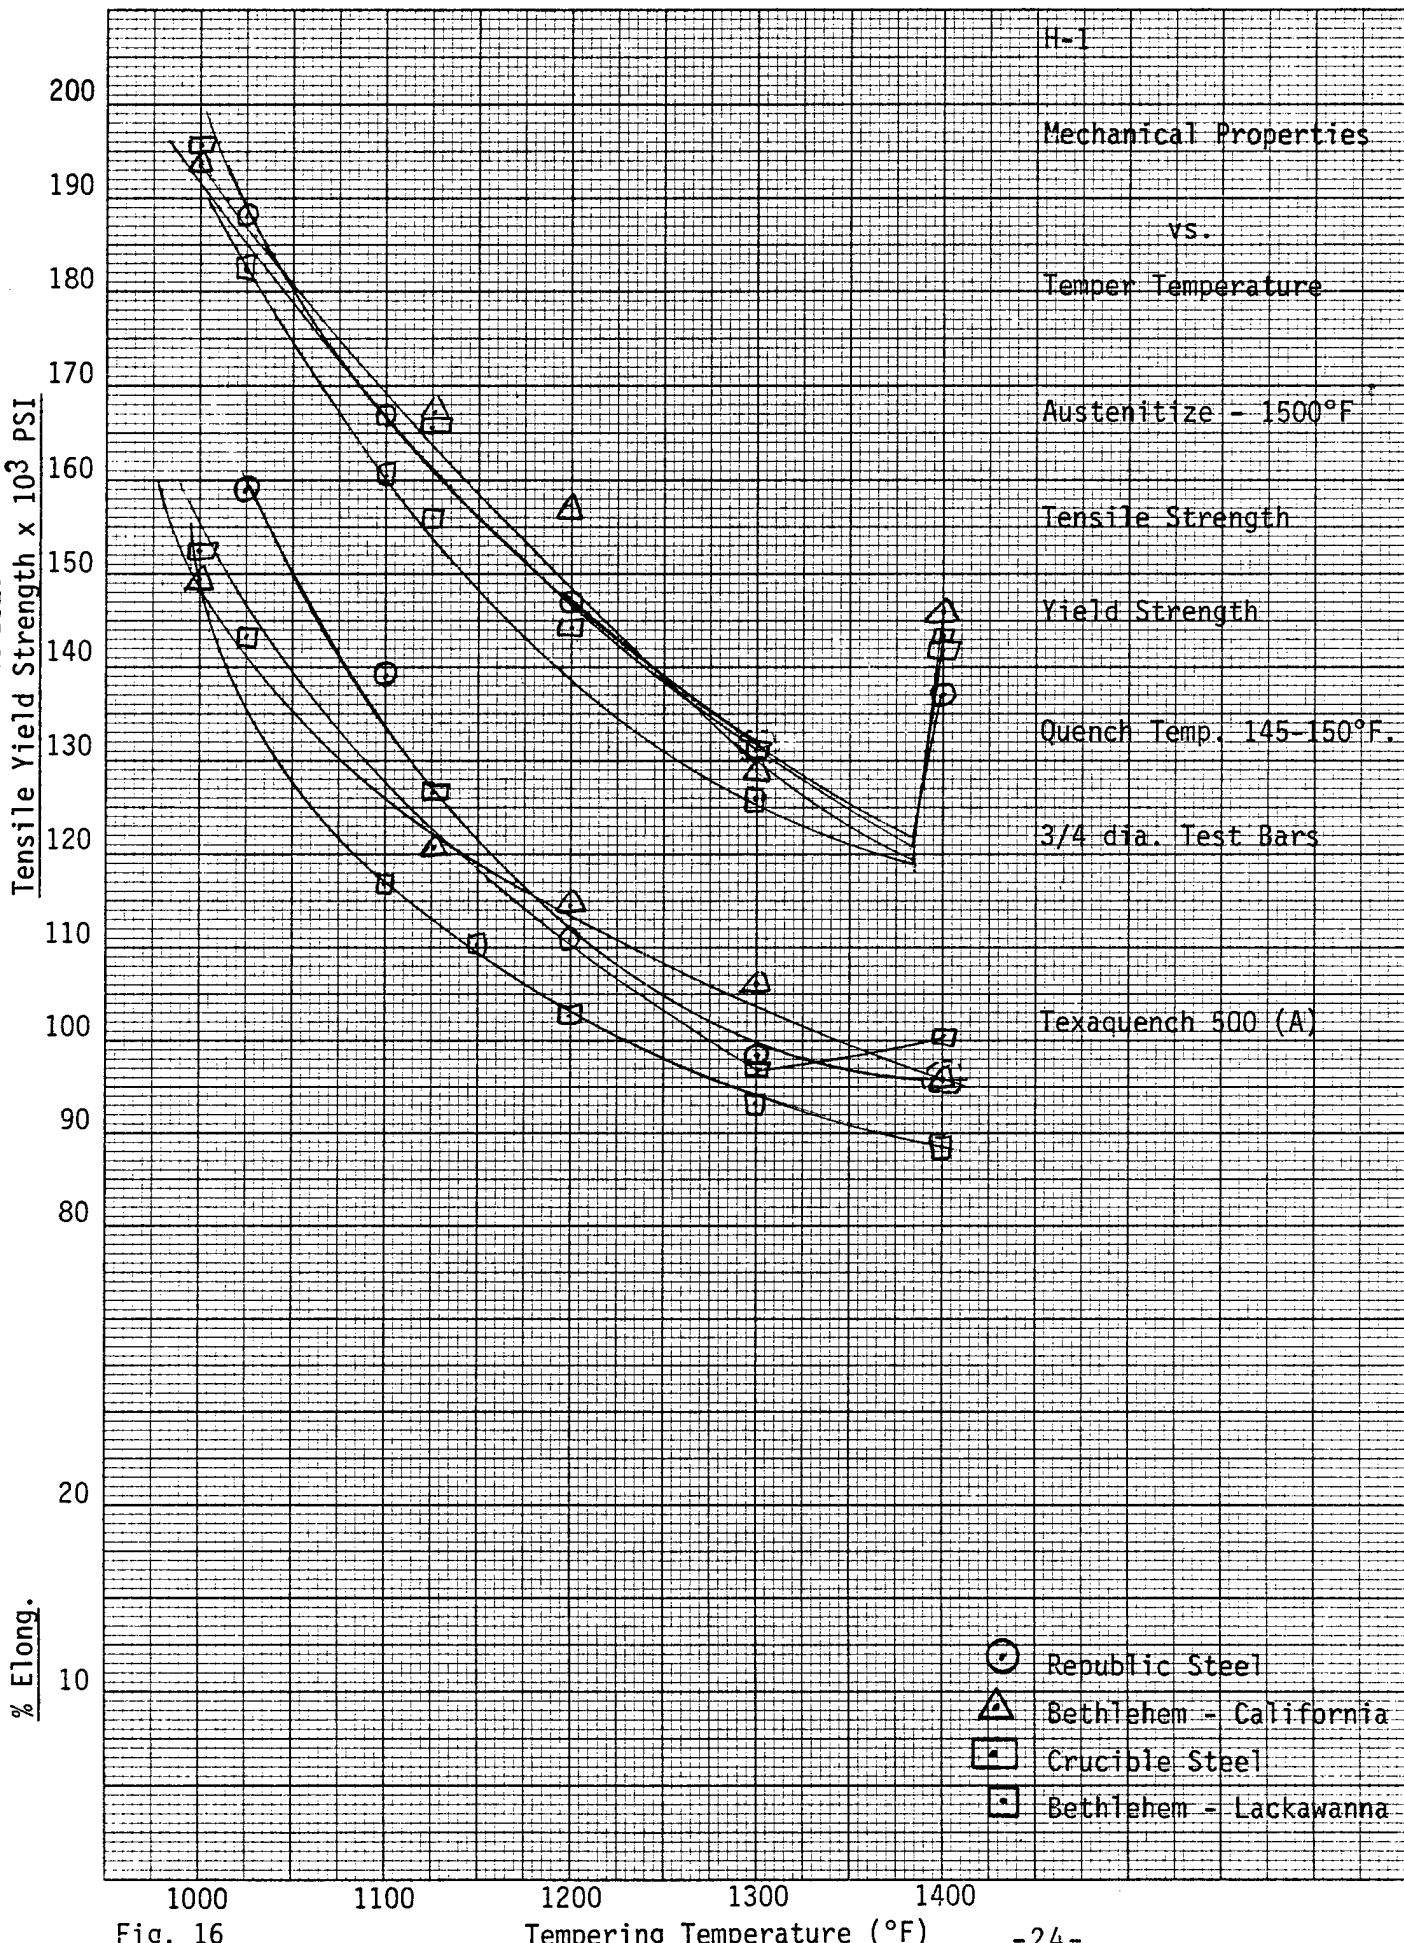



TABLE 6

HF-1  
Crucible Steel

<u>Austenitizing</u> $\frac{\circ}{\circ}$ F	<u>Section</u>	<u>Yield Strength</u> (psi)	<u>Tensile Strength</u> (psi)	<u>Elong.</u> (%)	<u>RA</u> (%)
1000 538	L	152941	195187	6.4	18.7
1125 607	L	126462	165461	10.4	26.5
1200 649	L	102863	144221	12.5	36.0
1300 704	L	96912	130990	14.0	35.7
1400 760	L	100212	141569	13.9	37.3
1000 538	T	176653	193905	5.1	5.0
1125 607	T	121406	161342	8.6	6.0
1200 649	T	116736	151653	10.45	14.8
1300 704	T	98140	130269	9.5	32.8
1400 760	T	94008	129132	8.0	6.1

HF-1  
Bethlehem Steel (California)

<u>Austenitizing</u> $\frac{\circ}{\circ}$ F	<u>Section</u>	<u>Yield Strength</u> (psi)	<u>Tensile Strength</u> (psi)	<u>Elong.</u> (%)	<u>RA</u> (%)
1000 538	L	149861	193872	6.9	13.8
1125 607	L	120873	167320	11.0	24.7
1200 649	L	114400	157655	11.5	22.7
1300 704	L	106180	129213	15.0	36.3
1400 760	L	95696	146055	1007	30.8
1000 538	T	149793	162500	5.1	4.3
1125 607	T	120582	141580	9.76	4.8
1200 649	T	111570	151343	1043	6.5
1300 704	T	101064	125851	868	11.1
1400 760	T	94595	132640	914	8.8

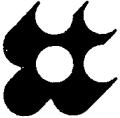

## AUSTENITIC GRAIN SIZE

TABLE 7 - ASTM AUSTENITIC GRAIN SIZE

Crucible Steel - No. 4


Bethlehem Steel - No. 4

Photomacrographs are included in Appendix C.

### CONCLUSION:

The following conclusions are a composite of those from the initial report and this supplemental report:

1. There is no significant difference between box-cooled or furnace-cooled material.
2. Material from all four sources will meet the desired mechanical properties.
3. Flame cutting must be forbidden.
4. HF-1 must be tempered immediately after quenching.
5. Severe surface conditioning by grinding is unacceptable.
6. All four heats of steel met the current specification (MIL-S-50783).

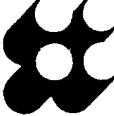

## APPENDIX A

### Photographs of Macro Cleanliness

**MACRO CLEANLINESS**

**CRUCIBLE STEEL**


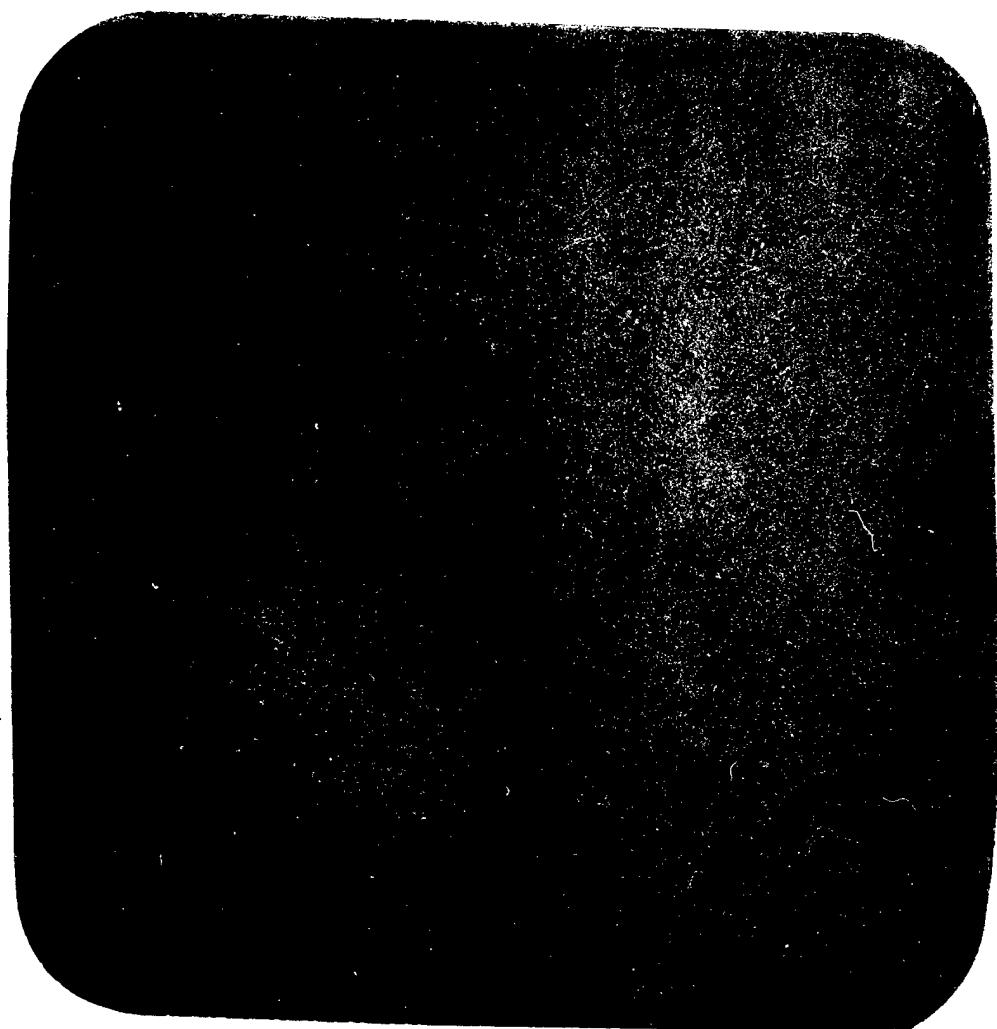


Figure 17 - Macro etched section of Crucible Steel billet.  
1X

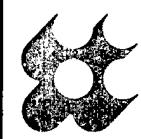

MACRO CLEANLINESS

BETHLEHEM STEEL

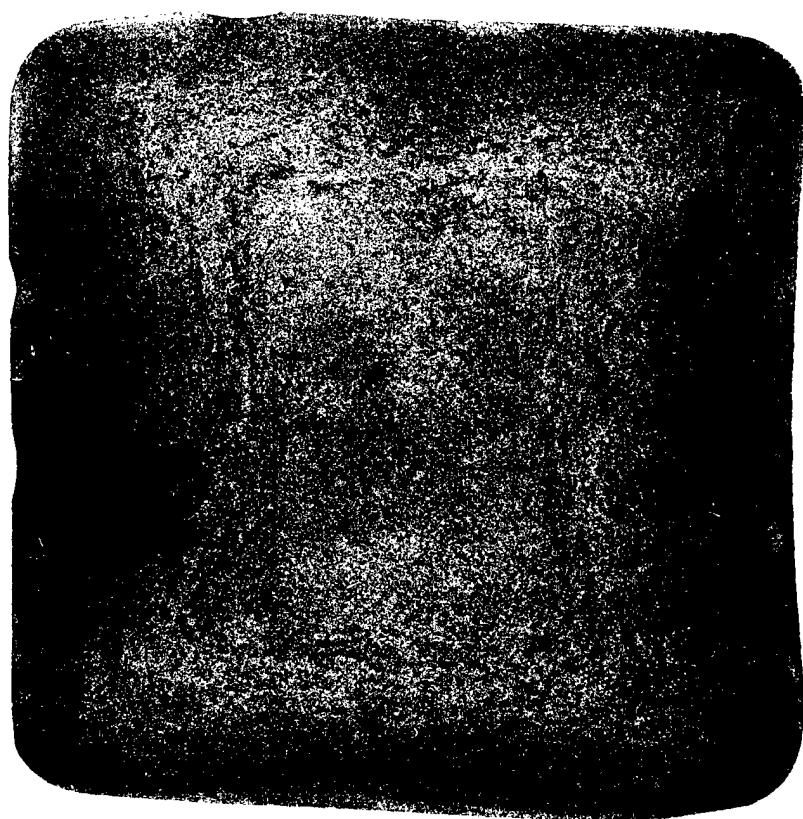



Figure 18 - Macro etched section of Bethlehem Steel billet.  
IX



## APPENDIX B

### Billet Cross Section Hardness Pattern

		RE SIONS								
SYM.		DESCRIPTION						BY	DATE	APPR.

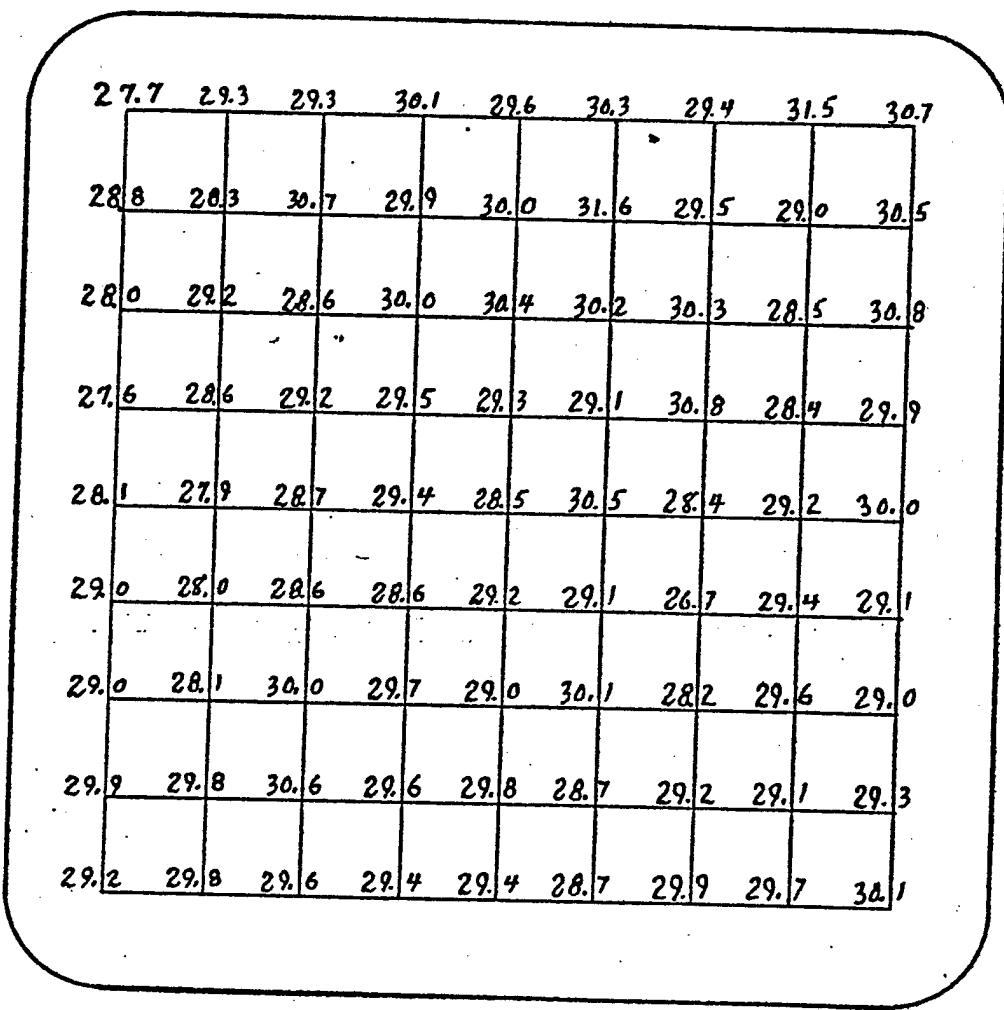

Average (81 reads.) — 29.35 R<sub>c</sub>

Standard Deviation.  $\pm 0.8895$

TEST BLOCK (35.0  $\pm 1.0$ ) — 34.6 R<sub>c</sub>

Bethlehem Steel-California


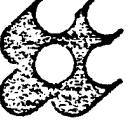
TOLERANCES UNLESS OTHERWISE SPECIFIED		TITLE	Chamberlain		
.000	$\pm .005$			Chamberlain Manufacturing Corporation	Scranton Army Ammunition Plant
.00	$\pm .010$	DRN.	S. C.	DATE 5-7-81	SCALE FULL
.0	$\pm .020$	CXD.			
FRAC.	$\pm 1/32$	APPD.			
ANGLE	$\pm 1^\circ$				

Figure 19. Bethlehem Steel Cross Section Hardness Patterns

REVIS.JNS

SYM.	DESCRIPTION	BY	DATE	APPR.

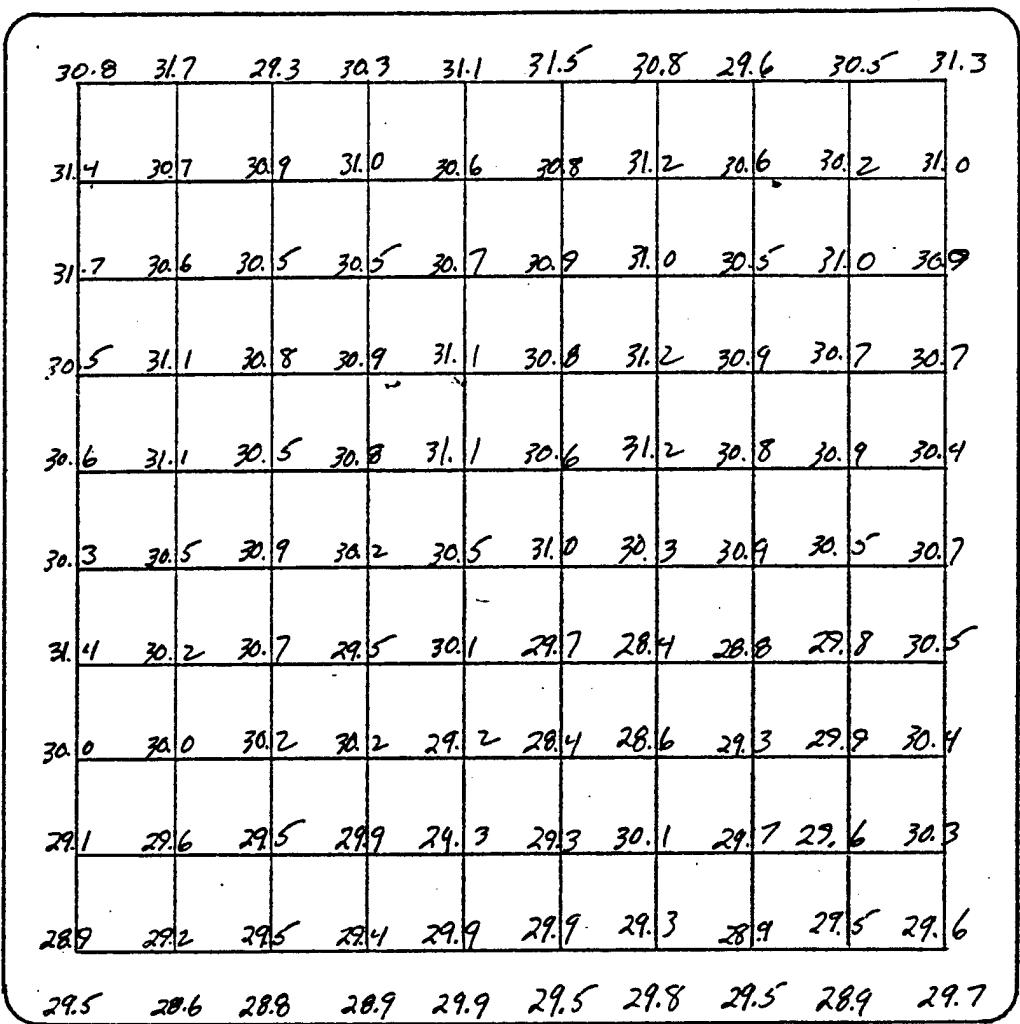

Rockwell Test Block  
 $C 35.0 \pm 1.0 R_c$   
 5-7-81 35.0 (5 Tests.)

Mean  $30.225 R_c$   
 $\bar{x} 0.7849$

Crucible Steel

TOLERANCES UNLESS OTHERWISE SPECIFIED		TITLE	Chamberlain		
.000	$\pm .005$		BILLET	Chamberlain Manufacturing Corporation Scranton Army Ammunition Plant	
.00	$\pm .010$	DRN.	L J F	DATE 5 22 81	SCALE FULL
.0	$\pm .020$	CKD.			
FRAC.	$\pm 1/32$	APPD.			
ANGLE	$\pm 1^\circ$				

Figure 20. Crucible Steel Cross Section Hardness Patterns.



**APPENDIX C**

**ASTM GRAIN SIZE**

ASTM GRAIN SIZE

BETHLEHEM STEEL

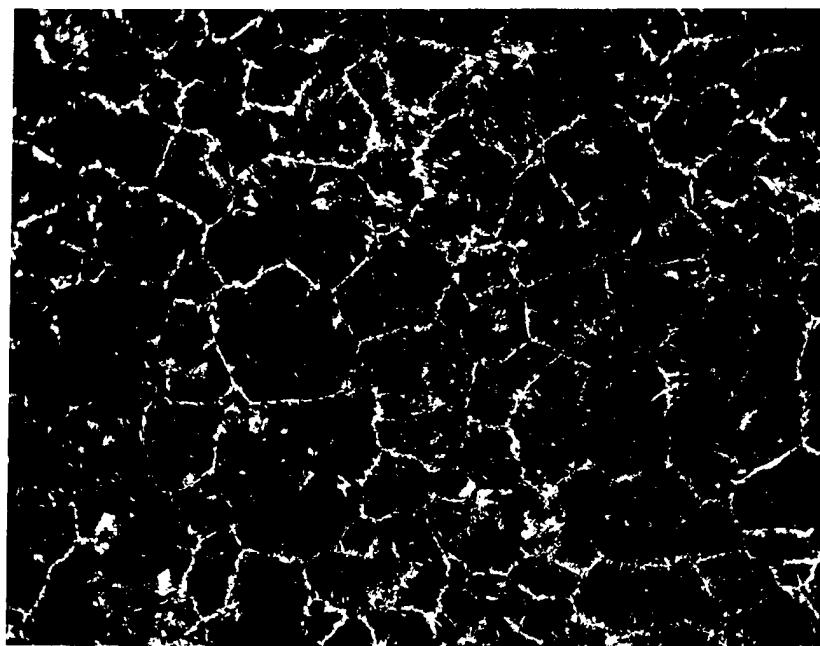


Figure 21 - ASTM Grain size of Bethlehem Steel material.  
125X

ASTM GRAIN SIZE

CRUCIBLE STEEL

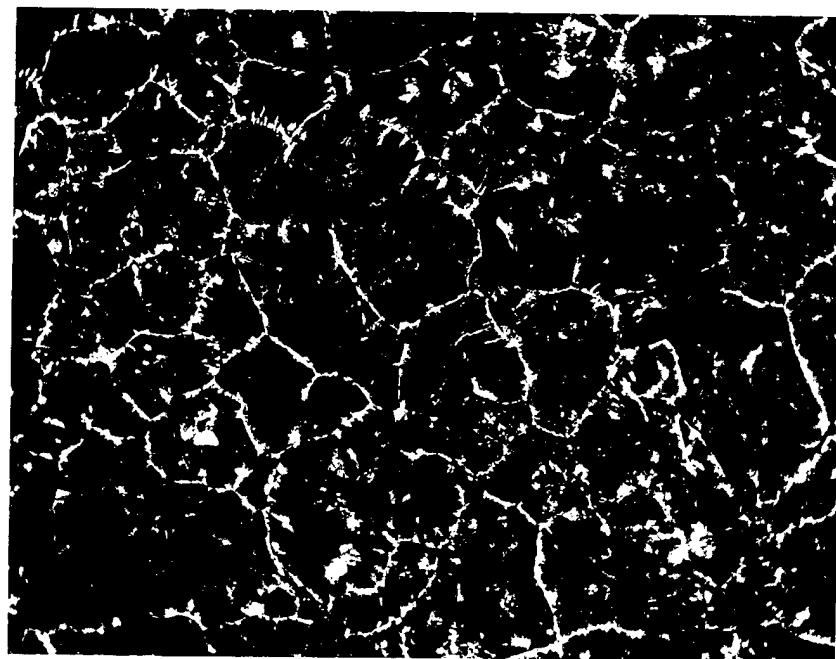


Figure 22 - ASTM Grain Size of Crucible Steel material.  
125X

DISTRIBUTION

**Commander**

U. S. Army Armament Research and Development Command  
ATTN: DRDAR-TSS (5) (Building 59)  
DRDAR-CGL (1) (Building 3)  
DRDAR-LCU-M (20)  
DRCPM-PBM-MA (2)  
DRDAR-QAR-Q (1)

Dover, NJ 07801

**Administrator**

Defense Technical Information Center  
ATTN: Accessions Division (2)  
Cameron Station  
Alexandria, VA 22314

**Director**

U. S. Army Materiel Systems Analysis Activity  
ATTN: DRXSY-MP  
Aberdeen Proving Ground, MD 21005

**Commander/Director**

Chemical Systems Laboratory  
U. S. Army Armament Research and Development Command  
ATTN: DRDAR-CLJ-L  
DRDAR-CLB-PA  
APG, Edgewood Area, MD 21010

**Director**

Ballistics Research Laboratory  
U. S. Army Armament Research and Development Command  
ATTN: DRDAR-TSB-S  
Aberdeen Proving Ground, MD 21005

**Chief**

Benet Weapons Laboratory, LCWSL  
U. S. Army Armament Research and Development Command  
ATTN: DRDAR-LCB-TL  
Watervliet, NY 12189

**Commander**

U. S. Army Armament Materiel Readiness Command  
ATTN: DRSAR-LEP-L  
Rock Island, IL 61299

**Director**

U. S. Army TRADOC Systems Analysis Activity  
ATTN: ATAA-SL  
White Sands Missile Range, NM 88002